

REPEAT-O-TYPE[®]

Chip Resetters

For: Epson Inkjet cartridge chips— C70/C80

INSTRUCTIONS

Resetting the color ink cartridge (wide):

Hold the inkjet cartridge on a flat surface, with ink port facing down. Place the resetter on the same flat surface, as shown in Picture 1. Slide the resetter straight into the cartridge face so that the contact pins on the resetter mate with the contacts on the cartridge chip.

Hold the resetter firmly against the cartridge for a minimum of 6 seconds, as in Picture 2. Pull the resetter straight back from the cartridge and the job is done.

Note:

The black cartridge is wider than the color cartridges and will fill the gap between the fins on the resetter. The color cartridges should be held against the fin closer to the contact pins of the resetter.

Picture 1



Picture 2



Picture 3



Picture 4



Notes:

The circuitry turns itself off when finished. Holding it in place for a longer period of time does no harm. If you separate them too soon, there will be no damage, but the chip will not be reprogrammed.

The 7 gold pins that extend from the front of the resetter have been carefully positioned. Avoid dragging them sideways against other objects including the face of the ink cartridge. If they are bent they might not make contact with the ink cartridge at the correct spot.

Store the resetter in the box that it came in or a similar container. Do not let metal objects remain in contact with the 7 contact pins. They are electrically active and if shorted out will deplete the battery. The battery is not replaceable. It has a shelf life of about 5 years and will provide many hundreds of resets.

For questions or comments contact help@repeatotype.com

REPEAT-O-TYPE[®]
MANUFACTURING CORPORATION
ESTABLISHED 1931

665 State Highway 23 • Wayne, NJ 07470-6892 U.S.A. • (973) 696-3330
(800) 288-3330 • Fax: (973) 694-7287 • Email: help@repeatotype.com