


# Photo Ink Kit Refilling Instructions


for Hewlett-Packard and DeskJet 690C/692C/693C/694C  
C1816A Tri-Color Photo Cartridge

## WHAT'S INSIDE THIS REFILL SYSTEM KIT:

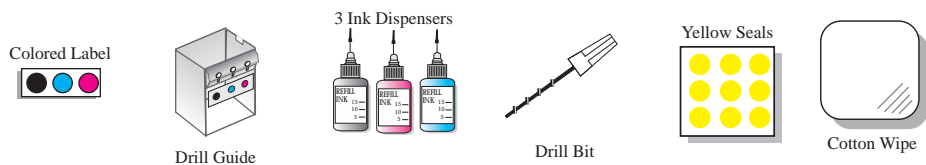



**Remove ink cartridge from printer and protect work surface. Refilling your cartridge is a clean & simple job, but it is best to cover your work area with newspaper or other scrap paper, to protect from accidental ink spills.**

1. Place cartridge in drill guide. See figure A. Drill into three color chambers. See Figure B.

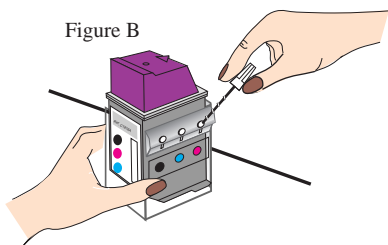


2. Take cartridge OUT of drill guide. Wipe away any plastic debris that remain around the drilled holes.


3. Apply tri-colored label to cartridge just below the 3 drilled holes. See Figure C. As the colored dots on the label must correspond to the separate ink chambers, *be sure to apply the label with the black dot to the left and the light magenta dot to the right.*

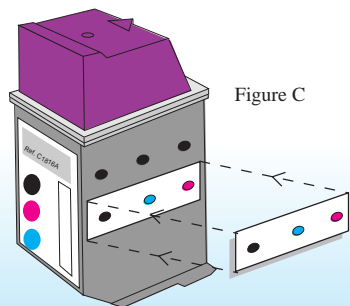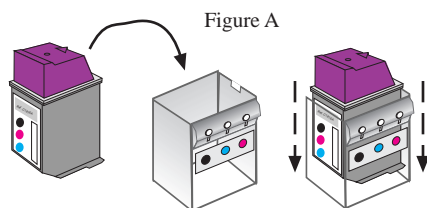

4. Determine which chamber (light cyan, light magenta or black) requires refilling. Select the appropriate dispenser of ink. Remove the plastic scabbard from the dispenser tip. Be sure to fill the chamber with proper color: light cyan, light magenta or black. Insert the dispenser tip at a "downward" angle into the fill hole as far as it will go. (Apply enough force to penetrate sponge inside.) Then draw it back about 1/4" (6mm) to leave a well for the ink as it is dispensed. The chamber should hold approximately 5 mls of ink as indicated on graduated bottle. See Figure D.

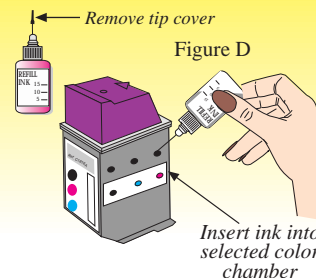


5. **IMPORTANT!** When dispensing ink into cartridge SLOWLY fill chamber by squeezing bottle gently but firmly. Allow the ink to absorb into the foam sponge, **DO NOT OVER FILL.** If ink starts to come out of the drill hole, stop filling. Chamber is full. See Figure E.

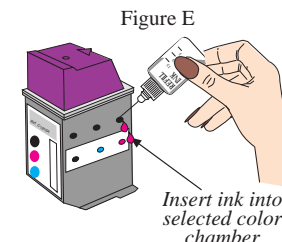

6. Wipe off any excess ink from cartridge with the wiping pad that is provided.

7. Cover ink fill holes with the round yellow seals provided. See Figure F.

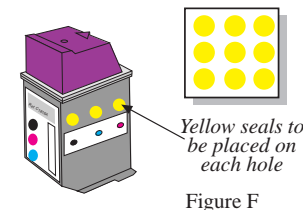

8. Replace cartridge into printer. Run self test or print head cleaning program. If printing is too light, remove cartridge and stand it upright on a wet paper towel. Let cartridge rest on wet towel for 3 to 5 minutes. Three spots of ink (magenta, cyan and black) should appear. Wipe cartridge and repeat self test or print head cleaning program. Clean any ink on hands or surface with water.

★★ *It is highly recommended that you refill the color chamber before it runs completely out of ink. As soon as a color of ink starts to skip, refill that color. Do not "top off" the other two colors, but refill each one as soon as it shows signs of skipping.*

IF YOU HAVE ANY QUESTIONS OR ENCOUNTER ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT:

**REPEAT-O-TYPE**  
MANUFACTURING CORPORATION  
ESTABLISHED 1931

665 State Highway 23 • Wayne, NJ 07470-6892, USA • (973) 696-3330 • (800) 288-3330  
Fax (973) 694-7287 • Email help@repeatotype.com

Hewlett-Packard, DeskJet and DeskWriter are trademarks of Hewlett-Packard Company.  
©1998 repeat-O-Type Manufacturing Corporation.