
 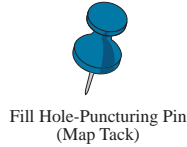



Refilling Instructions

For Epson Stylus Color 680/680T/685/777/777i/C50/C60/Photo 810/820
T017 • T026 • T028 Black Ink Cartridges

Kit Contents:

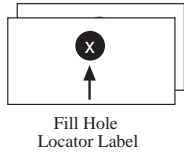

IMPORTANT:
THE EPSON PRINTER
COMMUNICATES WITH AN
ELECTRONIC CHIP ON THE
SIDE OF THE T017/T026 and T028
CARTRIDGES. IF YOU DO NOT
HAVE A METHOD OF RESETTING
THE CHIP TO READ "FULL" OR
REPLACING IT, THE REFILLED
CARTRIDGE WILL NOT BE
ACCEPTED BY YOUR PRINTER.
CONTACT YOUR DEALER FOR
INFORMATION ON
RESETTING CARTRIDGES.

Refilling your cartridge is a clean and simple job, but it is advisable to cover your work area with scrap paper to protect from accidental spills.

Note: Empty cartridges should be refilled as soon as they run out of ink to prevent the small amount of ink remaining in the cartridge from drying and hardening the sponge.

1. Remove ink cartridge from printer and place on work surface with ink nozzle facing up. See Figure 1.
 2. Using cotton wipe, clean area around ink port so that the surface is clean and dry.
 3. Peel round pressure sensitive seal from backer and affix firmly over ink port. See Figure 2.
 4. Turn cartridge over and locate the top edge of the rectangular label. Locate the "Fill Hole Locator" label, remove its backer and affix it over the cartridge label so that the top edges of the two labels are aligned with each other. See Figure 3.
 5. Using the fill hole puncturing tool, puncture the label at the indicated spot. See Figure 4.
 6. Remove the scabbard from the ink dispenser.
 7. Insert the ink dispenser tip into the fill hole as far as it will go and then draw back 1/4" (6mm) to create a void in the foam sponge inside the cartridge. See Figure 5.
 8. Dispense the ink VERY SLOWLY until ink starts to back up from the fill hole. Draw the bottle up so that the tip is almost out of the cartridge and release pressure from the bottle so that ink around fill hole is sucked back into the bottle. Withdraw the needle and wipe any ink from the surface around the fill hole. It is not necessary to reseal the fill hole.
- Note:** It is a good idea to let the refilled cartridge stand overnight with the ink port facing down to allow any air bubble left in the sponge to migrate to the top of the cartridge and out of the vent holes. It is also a good idea to keep two cartridges and alternate them so that you can always have a filled cartridge ready to put in the printer. Store your spare cartridges, ink port down, in an airtight container along with a wad of wet paper towel to retard evaporation of the ink.
9. Replace the electronic chip or reset it using a resetting device or software reset program of your choice.
 10. Replace the cartridge in the printer and run a nozzle check according to Epson's instructions. If not all of the nozzles are printing alternate cleaning cycles and nozzle checks until all nozzles are printing.
 11. If ink bottle is not empty recap it for future use.

Figure 1

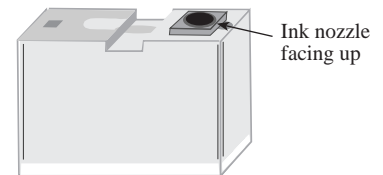


Figure 2

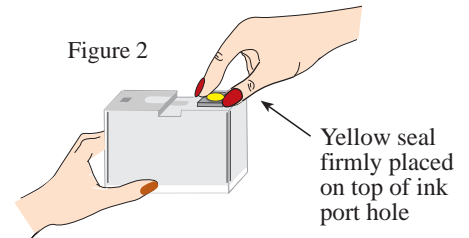


Figure 3

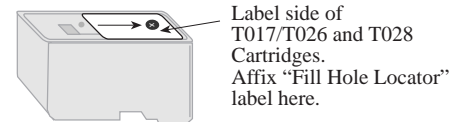


Figure 4


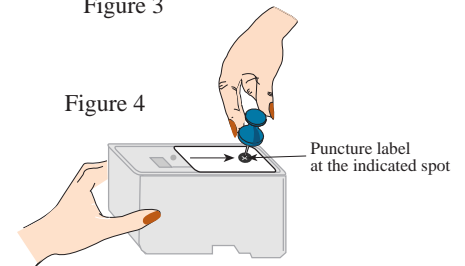


Figure 5

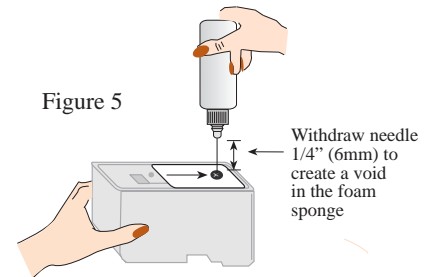

IF YOU HAVE ANY QUESTIONS OR ENCOUNTER ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT:

REPEAT-O-TYPE
MANUFACTURING CORPORATION
ESTABLISHED 1931

665 State Highway 23 • Wayne, NJ 07470-6892 U.S.A. • (973) 696-3330 • (800) 288-3330
Fax: (973) 694-7287 • Email: help@repeatotype.com