

# Refilling Instructions

for Hewlett-Packard C5010 "14" Tri-Color Cartridges

## CONTENTS:

- 1 30ml Dispenser bottle cyan ink - yield: equivalent to 7 times the useable cyan ink in a "14" cartridge
- 1 30ml Dispenser bottle magenta ink - yield: equivalent to 7 times the useable magenta ink in a "14" cartridge
- 1 30ml Dispenser bottle yellow ink - yield: equivalent to 7 times the useable yellow ink in a "14" cartridge
- Instruction sheet
- Cotton wipe



1. Cover work surface with a few layers of newspaper to protect against accidental spills.
2. Place cartridge on table with print on label facing down.
3. Uncap the ink bottle containing the color of ink that you just ran out of.
4. Hold the tip in contact with the cartridge fill hole of the correct color. Slowly inject the ink onto the absorbent pad. Stop filling when the pad stops absorbing ink. Recap the ink bottle and save for future use.
5. Repeat steps 3 and 4 for the other two ink colors.
6. Use the cotton wipe to absorb any ink from the fill hole and any other parts of the cartridges leaking ink.
7. Return all remaining components to the box for future use.
8. Follow the instruction on the back of this sheet to override the ink level gauge on your printer.

IF YOU HAVE ANY QUESTIONS OR ENCOUNTER ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT:

**REPEAT-O-TYPE**  
MANUFACTURING CORPORATION  
ESTABLISHED 1931

665 State Highway 23 • Wayne, NJ 07470-6892 U.S.A. • (973) 696-3330 • (800) 288-3330  
Fax: (973) 694-7287 • Email: [help@repeatotype.com](mailto:help@repeatotype.com) • [www.repeatotype.com](http://www.repeatotype.com)

# OVERRIDING THE INK LEVEL GAUGE ON HEWLETT-PACKARD PRINTERS USING “14” BLACK AND COLOR CARTRIDGES

**Important:** Continuing to print with an empty ink cartridge can result in damage to the printheads. When using a refilled cartridge it is necessary to override the Ink Level Gauge. Care should be taken to refill at the first sign that any color of ink is depleted. Indications of low ink level include: a) faint printing; b) voids in print; c) off-color printing (for example, print that should be green comes out as yellow or blue).

**Overriding:** The Ink Level Gauge is automatically reset when a different ink tank is installed in the printer. Overriding does not affect ink cartridge expiration dates. The printer cannot use an expired cartridge.

Follow these steps to override the Ink Level Gauge:

## For All Models except CP1160

### to override the ink level gauge for the black ink cartridge

- 1 Press ← and → at the same time **BRIEFLY**, then release.
- 2 On the keypad, press in order, **7, 8, 9**.
- 3 When the prompt appears asking if you want to override the ink level gauge, press **1** for **Yes**, **2** for **No**.

### to override the ink level gauge for the tri-color ink cartridge

- 1 Press ← and → at the same time **BRIEFLY**, then release.
- 2 On the keypad, press **4, 5, 6**.
- 3 When the prompt appears asking if you want to override the ink level gauge, press **1** for **Yes**, or **2** for **No**.

*Always install an ink cartridge before performing an Ink Level Gauge override.*

## For Color Inkjet CP1160

### If you installed a black ink cartridge

- 1 Press and hold down the Power button.
- 2 While holding down the Power button:
  - Press the Cancel button twelve times.
  - Press the Resume button once.
- 3 Release the Power button.

### If you installed the tri-color ink cartridge

- 1 Press and hold down the Power button.
- 2 While holding down the Power button:
  - Press the Cancel button twelve times.
  - Press the Resume button three times.
- 3 Release the Power button.

Release the Power button.

*Always install an ink cartridge before performing an Ink Level Gauge override.*