


**REPEAT-O-TYPE MANUFACTURING CORPORATION**  
**RESET INSTRUCTIONS FOR**  
**HP "56" (C6656A) AND "27" (C8727A) BLACK CARTRIDGES**  
**AND HP58 (C6658A) PHOTO CARTRIDGE**

Figure 1



1. Refill your cartridge using the ink provided in the refill kit.
2. Place the cartridge on the table with the circuit board facing you and the label facing up.
3. Using cellophane tape, cover the uppermost contact on the second row of contacts from the left. See Figure 1.
4. Install the cartridge in the printer and turn the printer on.  
A message will be displayed saying there is a problem with the cartridge. Click the "OK" button. The printer will proceed to print an alignment page. Allow the test to be completed.

Figure 2

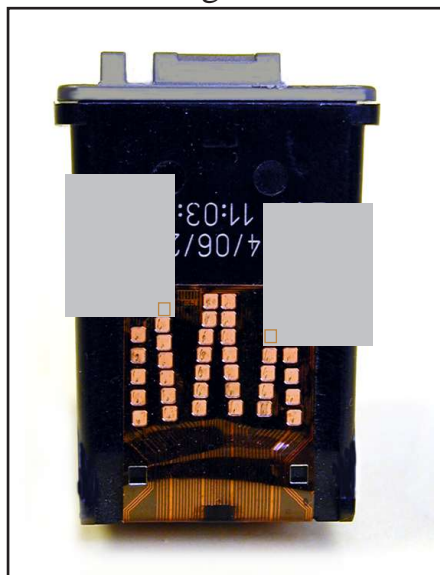

5. Remove the cartridge from the printer again. Leave the first piece of tape in place and place a second piece of tape over the uppermost contact on the second row of contacts from the right. See Figure 2.
6. Install the cartridge in the printer again. The problem message will be displayed again. Click the "OK" button and allow the alignment page to be printed.
7. Again remove the cartridge and peel both pieces of tape off. Make sure no tape residue is left on the contact. If necessary, gently clean the contacts with rubbing alcohol.
8. When you reinstall the cartridge it will read as new and full.

***REPEAT-O-TYPE***<sup>®</sup>  
*ESTABLISHED 1931*

665 State Highway 23 • Wayne, NJ 07470-6892 U.S.A. • (973) 696-3330  
(800) 288-3330 • Fax: (973) 694-7287 • Email: [help@repeatotype.com](mailto:help@repeatotype.com)