

# Refilling Instructions

CONTAINS SHARP BLADE  
KEEP KIT AND TOOL  
OUT OF REACH OF  
CHILDREN

for Lexmark 12A1990 and Compaq 337711-001 Photo Cartridge

CONTENTS: 1 Light Cyan Dispenser (15cc) • 1 Light Magenta Dispenser (15cc)  
1 Black Dispenser (15cc) and 1 Cap Removal Tool

**IMPORTANT!** You will have much better success in refilling if you add ink as soon as a color is depleted. It is difficult to unclog a dried-out cartridge.

1. Protect work surface.

Refilling your cartridge is a clean and simple job, but it is best to cover your work area with newspaper or other scrap paper to protect from accidental ink spills.

2. Remove depleted color print cartridge from printer according to printer manufacturer's instructions.


3. Lay cartridge on its side. CAREFULLY using the razor knife provided in the kit, work the blade into the joint between the red cap and black cartridge body on all four sides to pry off cap. See Fig. 1.

4. Remove the scabbard from the refill dispenser of the color you wish to refill. Insert the filler tube into the corresponding color compartment through either of the two fill holes. Push the needle into the absorbent material as far as it will go. Then draw it back out about 1/4" (6.5mm). See Fig. 2

5. Tilt the bottle until the filler tube is in the fully inverted position (Fig. 3). Squeeze the bottle with moderate pressure and keep pressure applied until you see ink appear at the top of the color compartment. Immediately stop squeezing the bottle and allow the refill bottle to suck back any excess ink.

6. Bring the bottle back to the position shown in Fig. 2 (filler tube in horizontal position) and remove the filler tube. Recap the ink bottle and save for future refills. Replace the red cap on the print cartridge and tape into place with pressure sensitive Scotch Tap (see Fig. 4). Inspect the print head and wipe off any excess ink immediately to prevent possible contamination of print nozzles.

7. Place the cartridge in the printer and run a priming/cleaning cycle and print test following the instructions included with your printer. It may be necessary to repeat the print test several times to bring the color balance back to normal.

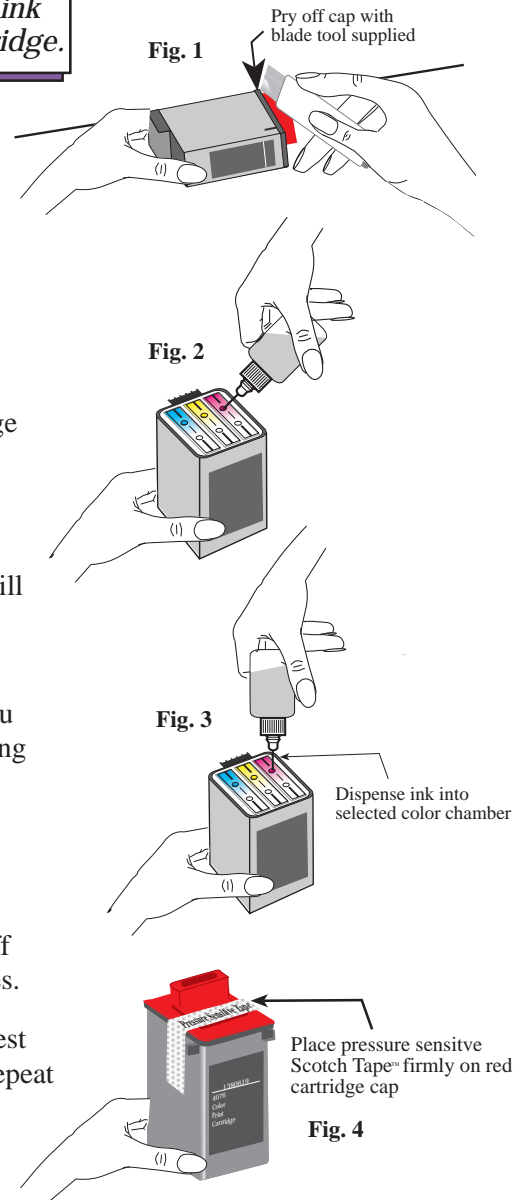

In the unlikely event that ink gets on your fingers, it can easily be removed by moistening a paper towel with a solution of laundry bleach diluted with an equal amount of water. Be sure to wash hands thoroughly after using bleach solution.

IF YOU HAVE ANY QUESTIONS OR ENCOUNTER ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT:

**REPEAT-O-TYPE**  
MANUFACTURING CORPORATION  
ESTABLISHED 1931

665 State Highway 23 • Wayne, NJ 07470-6892 U.S.A. • (973) 696-3330 • (800) 288-3330  
Fax: (973) 694-7287 • Email: help@repeatotype.com

Lexmark is a registered trademark of Lexmark International. Scotch Tape is a registered trademark of 3M Corp. ©1998 Repeat-O-Type Manufacturing Corporation.  
Compaq is a trademark of Compaq Computer Co.