

Refilling Instructions

for **Canon BC-20** and **Apple M3240G/A Black Ink Cartridges**
used in **Canon BJC-4000** and **Apple Color StyleWriter 2400 Printers**

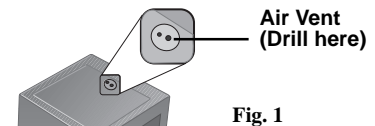


Fig. 1

1. Protect work surface.

Refilling your cartridge is a clean and simple job, but it is best to cover your work area with newspaper or other scrap paper to protect from accidental ink spills.

2. Remove printhead/ink cartridge from printer.

Open front cover of printer. Press and hold "CARTRIDGE" button until printer beeps. Printhead unit will soon come to rest at center of carriage. Lift green lever at side of printhead. Snap entire black printhead/ink cartridge out of its holder.

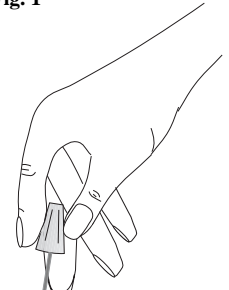


Fig. 2

3. Locate air vent on top of cartridge. (See Fig. 1)

Using tool provided, enlarge the hole using a twisting motion. (See Fig. 2) Withdraw drill bit.

4. Remove scabbard from filler tube of refill bottle.

Holding the print cartridge horizontally, insert filler tube into vent hole as far as it will go. (See Fig. 3)

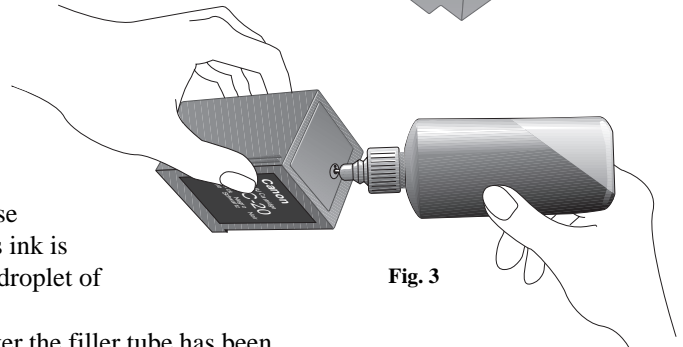


Fig. 3

5. Tilt the cartridge and refill bottle until the bottle is in the fully inverted position.

Slightly withdraw the refill bottle so that about 1/4" (6.5mm) of the fill tube is exposed. (See Fig. 4) Gently squeeze ink bottle to expell ink. You may release pressure* on the bottle several times while filling to allow air into the bottle as ink is expelled. Continue dispensing ink until the entire bottle is emptied, or until a droplet of ink appears at the fill hole (an indication that the cartridge is full.)

*NOTE: On the last squeeze, do not release pressure from the bottle until after the filler tube has been completely withdrawn, otherwise the suction created by the release of pressure could cause ink to be drawn back into the bottle.

6. While maintaining pressure, bring the bottle back to the position shown in Fig. 3 (filler tube in horizontal position) and remove the refill bottle.

If the refill bottle is not empty, recap it and save for future use. Blot up any residual ink around air vent with a tissue. Allow a few minutes for the ink to rewet the printhead.

7. Reinstall the cartridge into the printer.

Perform the printhead cleaning procedure following the instructions outlined in your printer instruction booklet.

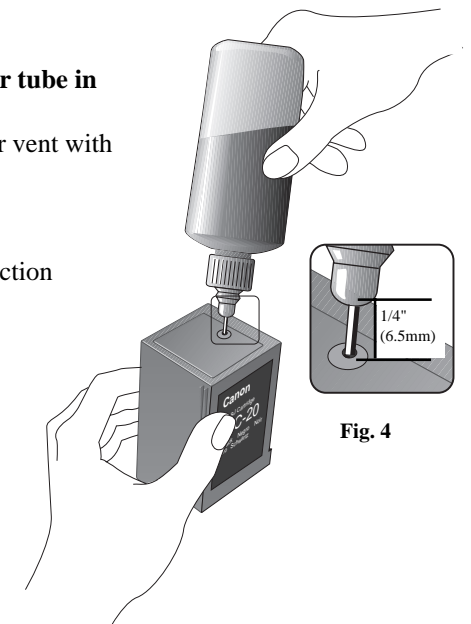


Fig. 4

In the unlikely event that ink gets on your fingers, it can easily be removed by moistening a paper towel with a solution of laundry bleach diluted with an equal amount of water. Be sure to wash hands thoroughly after using bleach solution.

IF YOU HAVE ANY QUESTIONS OR ENCOUNTER ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT:

REPEAT-O-TYPE
MANUFACTURING CORPORATION
ESTABLISHED 1931

665 State Highway 23 • Wayne, NJ 07470-6892
(973) 696-3330 • (800) 288-3330 • Fax (973) 694-7287