


Refilling Instructions

for Hewlett-Packard 51640A, 51640C/M/Y, *C6615DN, 51644C/M/Y, 51645A, *51645G and 51650C/M/Y Print Cartridges


CONTENTS:

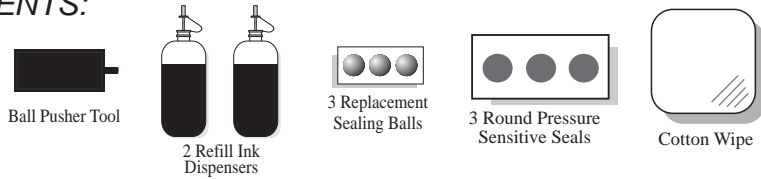


**Note: 51645G and C6615DN cartridges will not hold a full dispenser of ink. That is why an extra sealing ball and round seal are supplied.*

1. Cover work surface with a few layers of newspaper or paper towels.

2. Remove all contents of refill kit from box and identify parts:
 a) Ball pusher tool/replacement tool.
 b) 2 each refill ink dispensers.
 c) 3 each replacement sealing balls.
 d) 3 each round pressure sensitive seals.
 e) Cotton handy wipe.

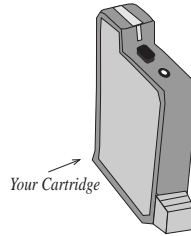


3. Tear out perforated panel on back of box to create cartridge holder.

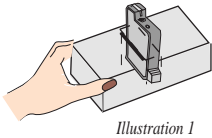


4. Place empty cartridge into holder (Illustration 1).



5. Using the point of a sharp knife, carefully remove round black patch to expose ball plug which seals fill hole. Push ball plug into cartridge with pointed end of ball pusher tool (Illustration 2).

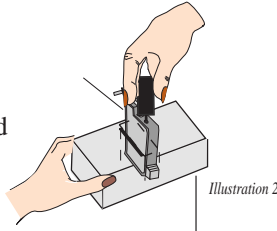

6. Remove cap from ink dispenser bottle. Tilt cartridge forward to insert fill tube (Illustration 3). Once fill tube is inserted tilt back to vertical position and gently squeeze bottle to fill cartridge. While filling, alternately squeeze and release pressure on bottle to allow air into bottle as ink is expelled. (Illustration 4). Do not overfill.

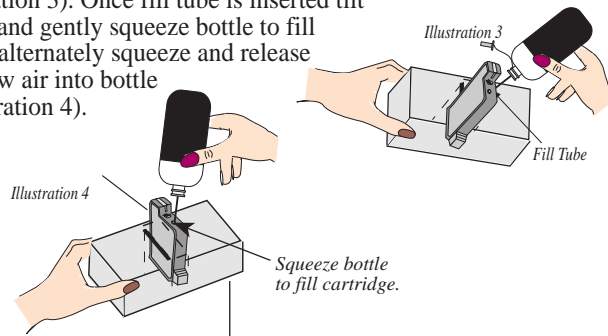

7. Place new sealing ball over fill hole and press into place with flat end of tool (Illustration 5a & 5b).

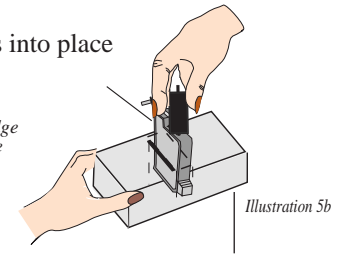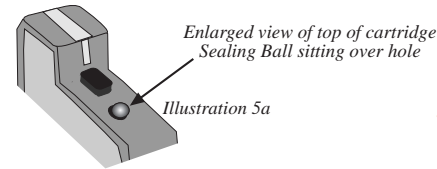

8. Wipe any ink drips from around fill hole and apply a new round pressure sensitive seal over fill hole.

9. **IMPORTANT** Remove cartridge from holder, turn it over so printhead faces down and while holding over holder, squeeze sides of cartridge **VERY FIRMLY** until several drops of ink are expelled from the printhead.

10. Gently wipe excess ink from printhead. Observe printhead for 15 seconds to be sure that ink has stopped dripping. If still dripping repeat steps 9 and 10.

11. Put second ink bottle, seals, wiping cloth and tool back in box to store for next use.
 Note: Green-Black ink level indicator may not completely reset but will turn completely black when cartridge is empty. If ink continues to seep from print head when inverted press printhead against absorbent pad until seeping stops.

IF YOU HAVE ANY QUESTIONS OR ENCOUNTER ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT:

REPEAT-O-TYPE
 MANUFACTURING CORPORATION
 ESTABLISHED 1931

665 State Highway 23 • Wayne, NJ 07470-6892 U.S.A. • (973) 696-3330 • (800) 288-3330
 Fax: (973) 694-7287 • Email: help@repeatotype.com

Hewlett-Packard is a trademark of Hewlett-Packard Company.
 ©2002 Repeat-O-Type Manufacturing Corporation.