


# Refilling Instructions

For Epson Stylus Color 900/900N • T005011 Tri-Color Ink Cartridge





## Kit Contents:

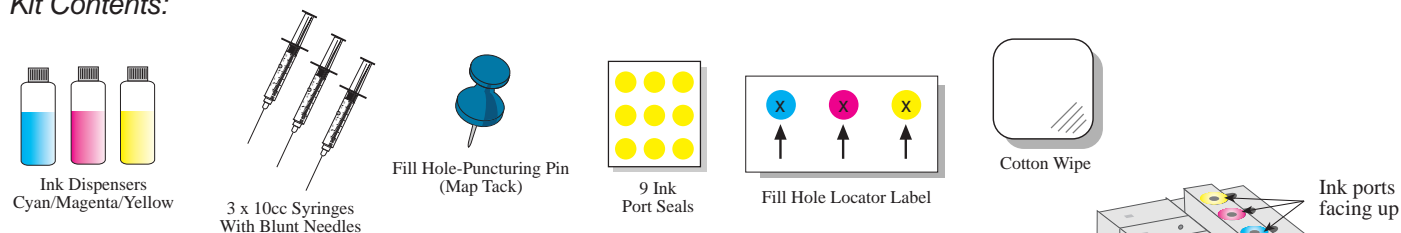

Refilling your cartridge is a clean and simple job, but it is advisable to cover your work area with scrap paper to protect from accidental spills.

*Note: Empty cartridges should be refilled as soon as they run out of ink to prevent the small amount of ink remaining in the cartridge from drying and hardening the sponge.*

1. Remove ink cartridge from printer and place on work surface with ink ports facing up. See Figure 1.
2. Using cotton wipe, clean area around ink ports so that the surfaces are clean and dry.
3. Peel round pressure sensitive seal from backer and affix firmly over an ink port. Repeat this procedure to seal the two other ports. See Figure 2.
4. Turn cartridge over and locate the top of the rectangular label. Peel the "Fill Hole Locator" label from its backer and affix over the cartridge label so that the top of the two labels are aligned with each other. See Figure 3.
5. Using the hole puncturing tool, punch holes into the three spots indicated on the locator label. See Figure 4.
6. Remove the cap from the bottle of the color you wish to refill. Affix the needle tips to the three syringes. Using one of the syringes, draw 10cc of ink into it. Insert the needle into the correct fill hole as far as it will go. Then draw the needle back about 1/4" (6mm) to create a void in the foam sponge. See Figure 5.
7. Dispense the ink into the chamber VERY SLOWLY. Fill until ink just starts to back up from the fill hole. Withdraw the needle. Recap the ink bottle and save for future use.
8. Repeat the above procedure for the remaining two colors of ink.

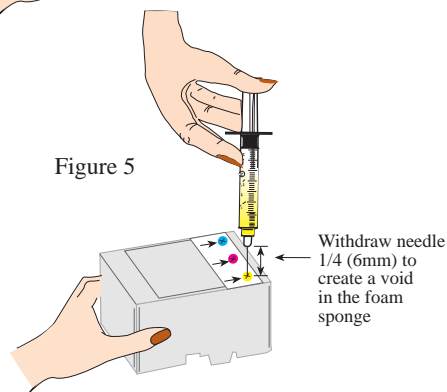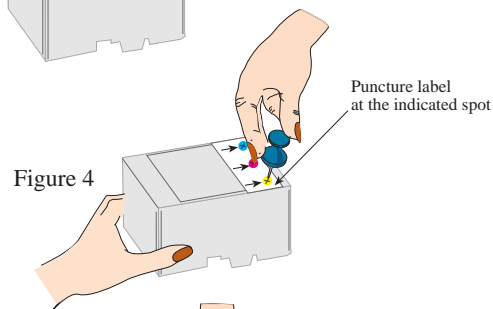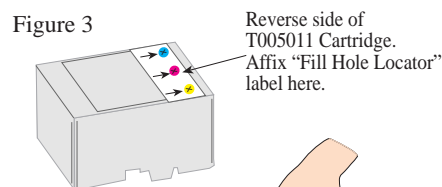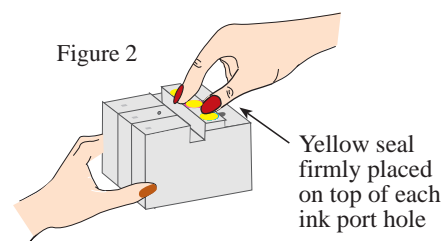

- Note: It is a good idea to let the refilled cartridge stand overnight with the ink ports facing down to allow any air bubble left in the sponge to migrate to the top of the cartridge and out of the vent holes. It is also a good idea to keep two cartridges and alternate them so that you can always have a filled cartridge ready to put in the printer. Keep spare cartridges, ink ports down, in an airtight container along with a wad of paper towel to retard evaporation.
9. Replace the cartridge in the printer and run a nozzle check according to Epson's instructions. If not all of the nozzles are printing alternate cleaning cycles and nozzle checks until all nozzles are printing.

IF YOU HAVE ANY QUESTIONS OR ENCOUNTER ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT:

**REPEAT-O-TYPE**  
MANUFACTURING CORPORATION  
ESTABLISHED 1931

665 State Highway 23 • Wayne, NJ 07470-6892 U.S.A. • (973) 696-3330 • (800) 288-3330  
Fax: (973) 694-7287 • Email: help@repeatotype.com