



# Photo Ink Kit Refilling Instructions

## WHAT'S INSIDE THIS REFILL SYSTEM KIT:

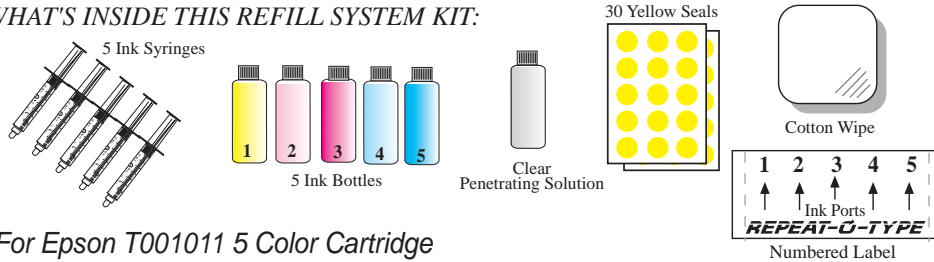

For Epson T001011 5 Color Cartridge used in Epson Stylus Photo1200 Printers

When using your Epson Photo Cartridge T001011 one color chamber can run out of ink before the others. To determine which chamber is empty run a Cartridge Check, you can do this by making sure your printer is off, hold down the load eject button and press power button. Hold down the buttons until power light starts to flash, this will give you a Cartridge Test Pattern. To help you to determine the color chamber sequence, refer to the color sequence chart below (See Figure A). If any lines are missing or are completely not shown, these are the color chambers that are empty. Now you can refill the empty color chamber by following our easy refilling instructions.

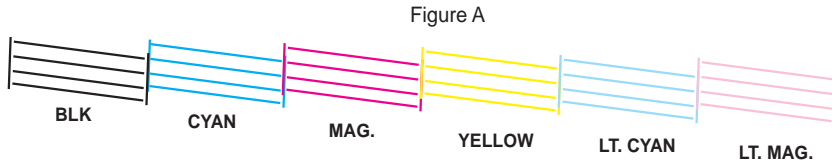

For best results, refill your cartridge ink chamber at the first sign of it being depleted. As soon as a color starts to skip, run a cleaning cycle and print check to be sure the color chamber is empty and not just clogged. If a color is empty, refill ONLY THAT COLOR. Do not "top off" the other colors, but refill each color only when it runs out.

## Remove ink cartridge from printer and protect work surface.


Refilling your cartridge is a clean & simple job, but it is best to cover your work area with newspaper or other scrap paper, to protect from accidental ink spills.

Note: The ink chambers of the Epson Stylus Photo 1200 color cartridge hold 5cc of ink each. The syringes supplied with this kit hold 3cc each. When filling a completely empty chamber you should be able to inject one syringe full of ink plus an additional 2cc of ink. When adding ink to a chamber that is not completely empty, stop injecting ink as soon as you note ink seeping from the air vents at the underside of the cartridge.

Included with this kit is a bottle of Clear Penetrating Solution (this is bottle number 6). If any of the chambers of your cartridge has been empty for a long period of time and the sponge has dried out, inject about 1cc of the penetrating solution into that chamber to rewet the sponge before filling with ink.


Note: Our inks are filtered to remove all particles larger than 1 micron. Filling through out the ink ports will not introduce foreign particles to the printheads because the printer itself has filter screens between the ink ports and the printheads.

- The ink bottles are numbered to correspond with the numbers on the label supplied with this kit. Before refilling your cartridge for the first time, place the label on the cartridge as shown in Figure B.

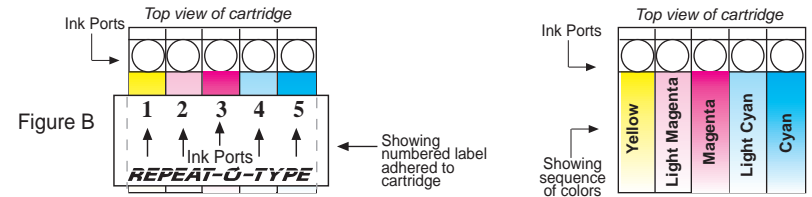


## 2. Filling the empty ink chamber


Secure ink bottle while filling the syringe with ink. See Figure C. Fill a syringe with 3cc of the ink color that has run out, being careful not to draw air bubbles into the syringe.

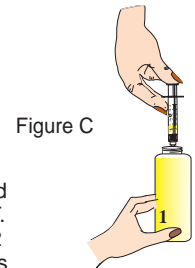

- Hold the cartridge with ink port holes facing upward. See Figure D. Hold the syringe TIGHTLY against the #1 ink port (See Figure E) and inject the ink VERY SLOWLY into the correct chamber. See Figure F. If the chamber had been completely empty, reload the syringe with 2 more cc of ink and add more ink until the syringe is empty or ink starts to seep from the air vent at the underside of the cartridge.

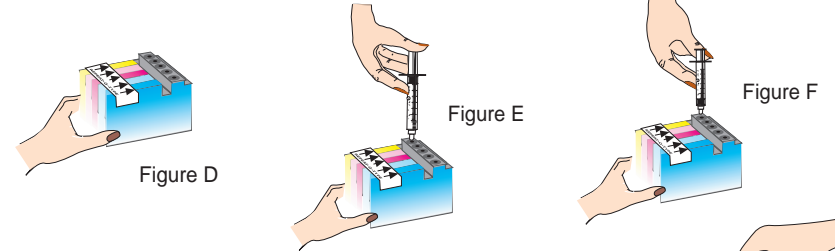

- Using the wipe supplied, wipe ink from around ink port hole being sure that the area is dry. Seal the ink port with one of the round yellow seals supplied. Press it firmly in place. See Figure G.

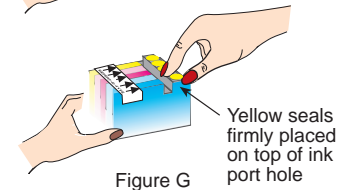

## 5. Filling other colors

Follow steps 2, 3 and 4 for each of the other colors using one syringe full of ink per color. Be sure NOT to confuse the light and dark version of cyan and magenta. Stop filling as soon as ink is seen at vents on underside of cartridge.

- Reinstall the cartridge into the printer. Perform the printhead cleaning procedure following the instruction booklet. Repeat cleaning procedure several times, until all 5 colors are printing.

IF YOU HAVE ANY QUESTIONS OR ENCOUNTER ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT:

**REPEAT-O-TYPE**  
MANUFACTURING CORPORATION  
ESTABLISHED 1931

665 State Highway 23 • Wayne, NJ 07470-6892, USA • (973) 696-3330 • (800) 288-3330  
Fax (973) 694-7287 • Email help@repeatotype.com

Epson is a trademark of Seiko Epson Corp. ©2002 Repeat-O-Type Manufacturing Corporation.